

Löthinweise

DE


Danke, dass Sie sich für ein Produkt von RHEINZINK entschieden haben.

ACHTUNG



VERARBEITUNG


Bitte beachten Sie die Lötanleitung für die neue Produktlinie GRANUM EXTRA.

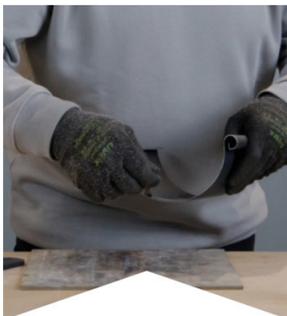

1

VOR DEM LÖTEN

Die zu lötende Stelle mit dem Lösemittel EXTRA von FELDER einstreichen.

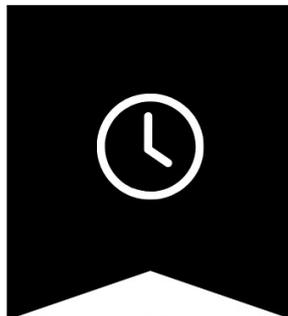

2

EINWIRKEN LASSEN

Das Lösemittel EXTRA 30 Sekunden einwirken lassen.



3

ABWISCHEN

Mit Reinigungsvlies die Beschichtung abwischen.



4

LÖTEN

Die vorbereitete Stelle wie gewohnt mit dem Lötwasser ZD-pro von FELDER löten.

Alternativ ist ein abrasives Entfernen der Beschichtung zur Vorbereitung des Lötvorgangs möglich.



Soldering Instructions

EN

Thank you for choosing a product from RHEINZINK.

ATTENTION



FOR PROCESSING


Please note the soldering instructions for the new GRANUM EXTRA product line.



1

BEFORE SOLDERING

Coat the area to be soldered with solvent EXTRA from FELDER.

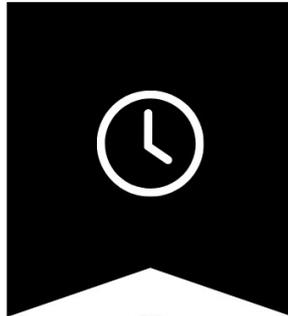

2

ALLOW TO TAKE EFFECT

The solvent EXTRA needs 30 seconds to take effect.



3

WIPE OFF

Wipe off the coating with a cleaning fleece.



4

SOLDERING

Solder the prepared area as usual with ZD-pro soldering fluid from FELDER.

Alternatively, abrasive removal of the coating in preparation for the soldering process is possible.

